


SUB ROOF THATCH VALLEY INSTALLATION

VALLEY INSTALLATION

INSTALL THE REED PANEL FLUSH TO ROOF VALLEY. DEPENDING ON THE PITCH OF THE ROOF, THE VIROTHATCH MAY NEED TO BE TRIMMED BACK SO IT DOES NOT CREATE A BUILD UP IN THE VALLEY CENTER.

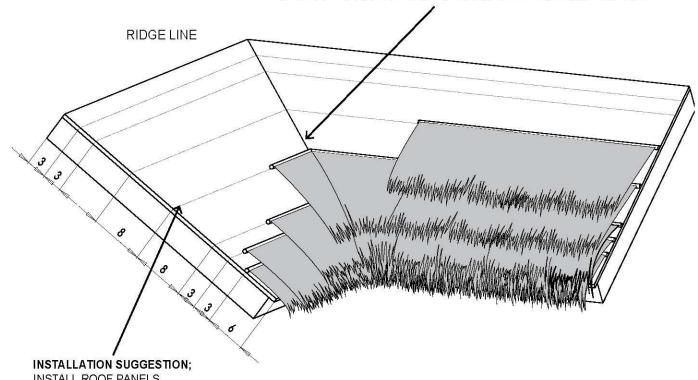

INSTALLATION SUGGESTION,
INSTALL ROOF PANELS
ABOVE AND BELOW CHALK LINE
BY 1/4" TO CREATE A MORE
NATURAL ROOF.

STAGGER THE SEAMS ON THE FOLLOWING ROWS WORKING UP THE ROOF SO THEY DO NOT LINE UP.

> Subroof Thatch: 30" L, x 22" H x .50" Thickness Subroof Thatch Bundle: 35.43" L